


# ROLL BAR MOUNT for HI-LIFT JACKS

Fits Roll Bars or Bull Bars of 1", 1.5", 1.75" or 2" diameter (25,40,47 or 50mm)

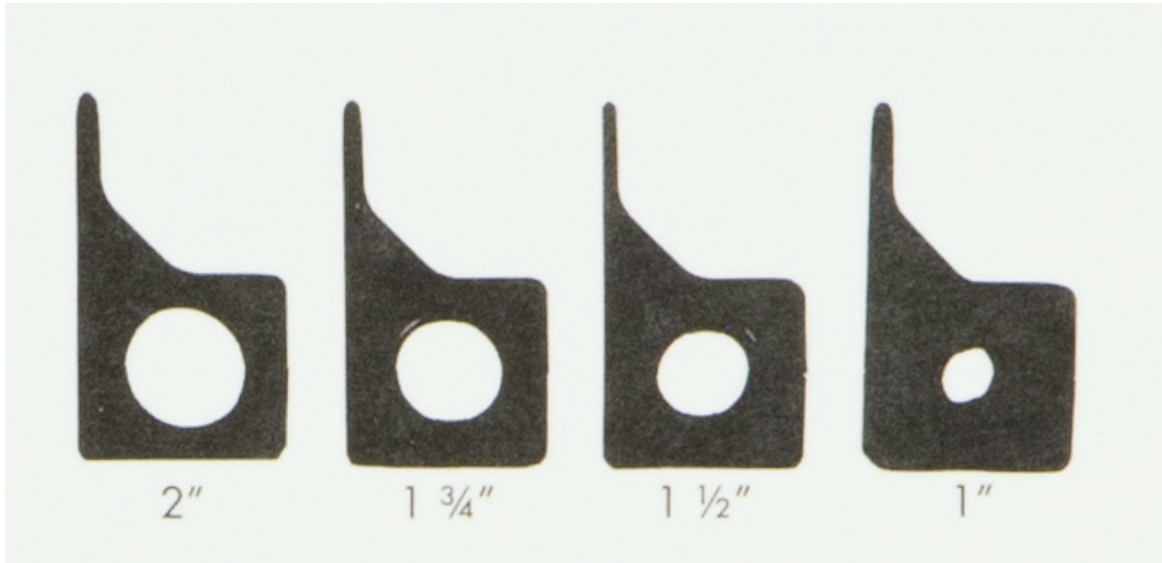

*Do Not install a jack on any part of a roll bar that is higher than the back of the front seat. This minimizes a life threatening jack hitting an occupant in a roll over.*

1. If needed, select the snap-in size that matches the roll bar or bull bar and insert.
2. Insert the rubber piece into the bottom of the Roll Bar Clamp. Put the Roll Bar clamp around the bar. Insert two square nuts into the back of the clamp and then insert two socket head bolts into the matching holes and tighten lightly. Insert the two other socket head bolts into the other side of the Roll Bar Clamp and tighten all four bolts. Repeat with second Roll Bar Clamp.
3. Insert 5/16" bolt into the hole in middle of Clamp. Screw bolt sleeve not the bolt and tighten with pliers. Repeat for second Clamp. Mount Hi-Lift Jack on sleeve. Screw on T handles on both bolts.